

xCAT 2 on AIX

Installing AIX standalone nodes

(using standard NIM rte method)

08/11/2010, PM 12:03:44

1.0 Overview	1
2.0 Installing AIX nodes (using standard NIM rte method)	2
2.1 Create an operating system image	2
2.2 Create an image_data resource (optional)	4
2.3 Add additional software	5
2.3.1 Copy the software to the lpp_source resource	6
2.3.2 Create NIM installp_bundle resources	6
2.3.3 Check the osimage (optional)	7
2.4 Define xCAT networks	7
2.5 Create additional NIM network definitions (optional)	8
2.6 Define the HMC as an xCAT node	9
2.7 Discover the LPARs managed by the HMC	10
2.8 Define xCAT cluster nodes	11
2.9 Add IP addresses and hostnames to /etc/hosts	11
2.10 Define xCAT groups (optional)	11
2.11 Set up customization scripts (optional)	12
2.11.1 Add NTP setup script	12
2.11.2 Add secondary adapter configuration script	13
2.11.3 Configure NIM to use nimsh and SSL	13
2.12 Create prescripts (optional)	14
2.13 Gather MAC information for the install adapters	15
2.14 Create NIM client & group definitions	16
2.15 Initialize the AIX/NIM nodes	17
2.16 DHCP configuration(Optional)	17
2.17 Open a remote console (optional)	18
2.18 Initiate a network boot	18
2.19 Verify the deployment	19
3.0 Cleanup	19
3.1 Removing NIM machine definitions	20
3.2 Removing NIM resources	20

1.0 Overview

This “How-To” illustrates how AIX “standalone” machines may be installed using the NIM “rte” method.

The process uses xCAT features to automatically run the necessary NIM commands.

NIM is an AIX tool that enables a cluster administrator to centrally manage the installation and configuration of AIX and optional software on machines within a networked environment. This document assumes you are familiar with NIM. For more information about NIM, see the *IBM AIX Installation Guide and Reference*. (<http://www-03.ibm.com/servers/aix/library/index.html>)

The process described below is one basic set of steps that may be used to install an AIX standalone node using the NIM “rte” installation method and is not meant to be a comprehensive guide of all the available NIM options.

Before starting this process it is assumed you have completed the following.

- An AIX system has been installed to use as an xCAT management node.
- The cluster network is configured. (The Ethernet network that will be used to perform the network boot of the nodes.)
- xCAT and prerequisite software has been installed and configured on the management node.
- Any logical partitions that will be used have already been created using the HMC interfaces.

2.0 Installing AIX nodes (using standard NIM rte method)

2.1 Create an operating system image

Use the xCAT **mknimimage** command to create an xCAT *osimage* definition as well as the required NIM installation resources.

An xCAT *osimage* definition is used to keep track of a unique operating system image and how it will be deployed.

In order to use NIM to perform a remote network boot of a cluster node the NIM software must be installed, NIM must be configured, and some basic NIM resources must be created.

The **mknimimage** command will handle all the NIM setup as well as the creation of the xCAT *osimage* definition. It will not attempt to reinstall or reconfigure NIM if that process has already been completed. See the **mknimimage man** page for additional details.

Note: If you wish to install and configure NIM manually you can run the AIX **nim_master_setup** command (Ex. “*nim_master_setup -a mk_resource=no -a device=<source directory>*”).

Note: For various reasons it is recommended that you make sure that the primary hostname of the management node is the interface that you will be using to install the nodes. If you do this before you configure NIM then NIM will automatically use it to define the NIM primary network. This will mean that you will not have to create any additional NIM network definitions and could avoid additional complications.

By default, the **mknimimage** command will create the NIM resources in subdirectories of /install. Some of the NIM resources are quite large (1-2G) so it may be necessary to increase the files size limit.

For example, to set the file size limit to “unlimited” for the user “root” you could run the following command.

```
/usr/bin/chuser fsize=-1 root
```

When you run the command you must provide a source for the installable images. This could be the AIX product media, a directory containing the AIX images, or the name of an existing NIM *lpp_source* resource. You must also provide a name for the *osimage* you wish to create. This name will be used for the NIM SPOT resource that is created as well as the name of the xCAT *osimage* definition. The naming convention for the other NIM resources that are created is the *osimage* name followed by the NIM resource type, (ex. “*61cosi_lpp_source*”).

In this example we need resources for installing a NIM “standalone” type machine using the NIM “rte” install method. (This type and method are the defaults for the **mknimimage** command but you can specify other values on the command line.)

For example, to create an *osimage* named “*610image*” using the images contained in the */myimages* directory you could run the following command.

```
mknimimage -s /myimages 610image
```

(Creating the NIM resources could take a while!)

Note: To populate the */myimages* directory you could copy the software from the AIX product media using the AIX *gencopy* command. For example you could run “*gencopy -U -X -d /dev/cd0 -t /myimages all*”.

By default the command will create NIM *lpp_source*, *spot*, and *bosinst_data* resources. You can also specify alternate or additional resources on the command line using the “attr=value” option, (“<nim resource type>=<resource name>”).

For example:

```
mknimimage -s /myimages 610image resolv_conf=my_resolv_conf
```

Any additional NIM resources specified on the command line must be previously created using NIM interfaces. (Which means NIM must have been configured previously.)

Note: Another alternative is to run **mknimimage** without the additional resources and then simply add them to the xCAT *osimage* definition later. You can add or change the *osimage* definition at any time. When you initialize and install the nodes xCAT will use whatever resources are specified in the *osimage* definition.

When the command completes it will display the *osimage* definition which will contain the names of all the NIM resources that were created. The naming convention for the NIM resources that are created is the *osimage* name followed by the NIM resource type, (ex. “*610image_lpp_source*”), except for the SPOT name. The default name for the SPOT resource will be the same as the *osimage* name.

For example:

```
Object name: 610image
bosinst_data=610image_bosinst_data
imagetype=NIM
lpp_source=610image_lpp_source
nimmethod=rte
nimtype=standalone
osname=AIX
resolv_conf=610image_resolv_conf
spot= 610image
```

Once the initial *osimage* definition is created you can change it by using the **chdef** command. For example, you may need to create additional NIM resources to use when installing the nodes, such as *script* or *installp_bundle* resources.

To add an *installp_bundle* resource to the *osimage* definition created in the previous example you could run the **chdef** command as follows.

```
chdef -t osimage -o 610image installp_bundle=mybundlename
```

The xCAT *osimage* definition can be listed using the **lsdef** command and removed using the **rmnimimage** command. See the man pages for details.

In some cases you may also want to modify the contents of the NIM resources. For example, you may want to change the *bosinst_data* file or add to the *resolv_conf* file etc. For details concerning the NIM resources refer to the NIM documentation.

You can list NIM resource definitions using the AIX **lsnim** command. For example, if the name of your SPOT resource is "610image" then you could get the details by running:

```
lsnim -l 610image
```

To see the actual contents of a NIM resource use "*nim -o showres <resource name>*". For example, to get a list of the software installed in your SPOT you could run:

```
nim -o showres 610image
```

Note: The **mknimimage** command will take care of the NIM master installation and configuration automatically, however, you can also do this using the standard AIX support. See the AIX documentation for details on using the **nim_master_setup** command or the SMIT "eznim" interface.

2.2 Create an *image_data* resource (optional)

Starting with xCAT 2.5 support has been added for NIM *image_data* resources.

A NIM *image_data* resource is a file that contains stanzas of information that is used when creating file systems on the node. To use this support you must create the file, define it as a NIM resource, and add it to the xCAT *osimage* definition.

To help simplify this process xCAT ships a sample image_data file called */opt/xcat/share/xcat/image_data/xCATsnData*. This file assumes you will have at least 70G of disk space available. It also sets the physical partition size to 128M.

This sample image_data file is intended to be used when installing xCAT service nodes but it may also be used for basic standalone compute nodes.

It sets the following default file system sizes.

```
/var -> 5G  
/opt -> 10G  
/ -> 30G  
/usr -> 4G  
/tmp -> 3G  
/home -> 0.12G  
/admin -> 0.12 G  
/livedump -> 0.25G
```

If you need to change any of these be aware that you must change two stanzas for each file system. One is the fs_data and the other is the corresponding vg_data.

Once you have settled on a final version of the image_data file you can copy it to the location that will be used when defining NIM resources. (ex. */install/nim/image_data/myimage_data*)

To define the NIM resource you could use the SMIT interfaces or run a command similar to the following.

```
nim -o define -t image_data -a server=master -a location=  
/install/nim/image_data/myimage_data myimage_data
```

To add these bundle resources to your xCAT osimage definition run:

```
chdef -t osimage -o 610SNimage image_data=myimage_data
```

For more information on using the image_data resource refer the the AIX/NIM documentation.

2.3 Add additional software

On xCAT cluster nodes you will have to install *openssl* and *openssh* as well as some prerequisite RPM packages that were included in the xCAT dependency tar file.

Note: If you have other additional software that you wish to have installed you can use the same basic method that is described below.

The software required by xCAT is specified in the sample bundle file discussed below. The installp filesets should be available from the AIX product media. The

prerequisite rpms are available in the `dep-aix-<version>.tar.gz` tar file that you downloaded from the xCAT download page.

2.3.1 Copy the software to the `lpp_source` resource

The required software must be copied to the NIM `lpp_source` that is being used for this OS image. The easiest way to do this is to use the “`nim -o update`” command.

For example, assume all the required software has been copied and unwrapped in the `/tmp/images` directory.

Note: In newer versions of the `dep-aix-<version>.tar.gz` tar file the packages are found in subdirectories corresponding to the AIX OS version (ex. 6.1, 71. etc).

To add all the packages to your `lpp_source` resource, you can run the following:

```
nim -o update -a packages=all -a source=/tmp/images/dep-aix/6.1  
610image_lpp_source
```

The NIM command will find the correct directories and update the `lpp_source` resource.

2.3.2 Create NIM `installp_bundle` resources

To get this additional software installed we need a way to tell NIM to include it in the installation. To facilitate this you can use the sample bundle files that are provided by xCAT.

To use the bundle files you need to define them as NIM resources and add them to the xCAT `osimage` definition.

Starting with xCAT 2.4.3 there are two sets of sample bundle files provided. One set can be used when installing a service node and one set is used when install a compute node. For each set there is a version number in the name corresponding to the different AIX OS levels. (`xCATaixCN53.bnd`, `xCATaixCN61.bnd` etc.) Just use the one that corresponds to the version of AIX you are running. These sample files are installed in “`/opt/xcat/share/xcat/installp_bundles`”. If you are using an older version of xCAT you can find sample bundle files included in the `core-aix-<version>.tar.gz` tar file.

Important note: Always make sure that the contents of the bundle files you use match the software that was copied to the `lpp_source` directory. (See the step below named “Check the `osimage`”.)

Copy the bundle file (say `xCATaixCN.6.1.bnd`) to a location where it can be defined as a NIM resource, for example “`/install/nim/installp_bundle`”.

To define the NIM resources you can run the following commands.

```
nim -o define -t installp_bundle -a server=master -a location=  
/install/nim/installp_bundle/xCATaixCN61.bnd xCATaixCN61
```

To add the bundle resources to your xCAT `osimage` definition run:

```
chdef -t osimage -o 610image  
installp_bundle=xCATaixCN61
```

This bundle file will be included in the underlying NIM commands that are used and NIM will include this additional software when installing the nodes.

2.3.3 Check the osimage (optional)

To avoid potential problems when installing a node it is advisable to verify that all the software that you wish to install has been copied to the appropriate NIM lpp_source directory.

Any software that is specified in the “otherpkgs” or the “installp_bundle” attributes of the osimage definition must be available in the lpp_source directories.

Also, if your bundle files include rpm entries that use a wildcard (*) you must make sure the lpp_source directory does not contain multiple packages that will match that entry. (NIM will attempt to install multiple version of the same package and produce an error!)

To find the location of the lpp_source directories run the “lsnim -l <lpp_source_name>” command. For example:

```
lsnim -l 610image_lpp_source
```

If the location of your lpp_source resource is "/install/nim/lpp_source/610image_lpp_source/" then you would find rpm packages in "/install/nim/lpp_source/610image_lpp_source/RPMS/ppc" and you would find your installp and emgr packages in "/install/nim/lpp_source/610image_lpp_source/installp/ppc".

To find the location of the installp_bundle resource files you can use the NIM “lsnim -l” command. For example,

```
lsnim -l xCATaixSSH
```

Starting with xCAT version 2.4.3 you can use the xCAT **chkosimage** command to do this checking. For example:

```
chkosimage -V 61cosi
```

See the **chkosimage** man page for details.

2.4 Define xCAT networks

Create an xCAT network definition for each network that contains cluster nodes. You will need a name for the network and values for the following attributes.

net	The network address.
mask	The network mask.
gateway	The network gateway.

You can use the xCAT **makenetworks** command to gather cluster network information and create xCAT network definitions. See the **makenetworks** man page for details.

In our example we will assume that all the cluster node management interfaces and the xCAT management node interface are on the same network. You can use the xCAT **mkdef** command to define the network.

For example:

```
mkdef -t network -o net1 net=9.114.113.224 mask=255.255.255.224  
gateway=9.114.113.254
```

Note: The xCAT definition should correspond to the NIM network definition. If multiple cluster subnets are needed then you will need an xCAT and NIM network definition for each one.

2.5 Create additional NIM network definitions (optional)

For the process described in this document we are assuming that the xCAT management node and the LPARs are all on the same network.

However, depending on your specific situation, you may need to create additional NIM network and route definitions.

NIM network definitions represent the networks used in the NIM environment. When you configure NIM, the primary network associated with the NIM master is automatically defined. You need to define additional networks only if there are nodes that reside on other local area networks or subnets. If the physical network is changed in any way, the NIM network definitions need to be modified.

To create the NIM network definitions corresponding to the xCAT network definitions you can use the xCAT **xcat2nim** command.

For example, to create the NIM definitions corresponding to the xCAT “clstr_net” network you could run the following command.

```
xcat2nim -V -t network -o clstr_net
```

Manual method

The following is an example of how to define a new NIM network using the NIM command line interface.

Step 1

Create a NIM network definition. Assume the NIM name for the new network is “clstr_net”, the network address is “10.0.0.0”, the network mask is “255.0.0.0”, and the default gateway is “10.0.0.247”.

```
nim -o define -t ent -a net_addr=10.0.0.0 -a snm=255.0.0.0 -a  
routing1='default 10.0.0.247' clstr_net
```


Step 2

Create a new interface entry for the NIM “master” definition. Assume that the next available interface index is “2” and the hostname of the NIM master is “xcataixmn”. This must be the hostname of the management node interface that is connected to the “clstr_net” network.

```
nim -o change -a if2='clstr_net xcataixmn 0' -a cable_type2=N/A master
```

Step 3

Create routing information so that NIM knows how to get from one network to the other. Assume the next available routing index is “2”, and the IP address of the NIM master on the “master_net” network is “8.124.37.24”. Assume the IP address on the NIM master on the “clstr_net” network is “10.0.0.241”. This command will set the route from “master_net” to “clstr_net” to be “10.0.0.241” and it will set the route from “clstr_net” to “master_net” to be “8.124.37.24”.

```
nim -o change -a routing2='master_net 10.0.0.241 8.124.37.24'  
clstr_net
```

Step 4

Verify the definitions by running the following commands.

```
lsnim -l master
```

```
lsnim -l master_net
```

```
lsnim -l clstr_net
```

See the NIM documentation for details on creating additional network and route definitions. (*IBM AIX Installation Guide and Reference*.

<http://www-03.ibm.com/servers/aix/library/index.html>)

2.6 Define the HMC as an xCAT node

The xCAT hardware control support requires that the hardware control point for the nodes also be defined as a cluster node.

The following command will create an xCAT node definition for an HMC with a host name of “hmc01”. The *groups*, *nodetype*, *mgt*, *username*, and *password* attributes must be set.

```
mkdef -t node -o hmc01 groups="hmc,all" nodetype=hmc mgt=hmc  
username=hscroot password=abc123
```

If xCAT Management Node is in the same service network with HMC, you will be able to discover the HMC and create an xCAT node definition for the HMC automatically.

```
lsslp -w -s HMC
```

The above xCAT command lsslp discovers and writes the HMCs into xCAT database, but we still need to set HMCs' username and password.

```
chdef -t node -o hmc01 username=hscroot password=abc123
```

For more details with hardware discovery feature in xCAT, please refer to document:

<http://xcat.svn.sourceforge.net/viewvc/xcat/xcat-core/trunk/xCAT-client/share/doc/xCAT2pHWManagement.pdf>)

2.7 Discover the LPARs managed by the HMC

This step assumes that the partitions are already created using the standard HMC interfaces.

Use the **rscan** command to gather the LPAR information. This command can be used to display the LPAR information in several formats and can also write the LPAR information directly to the xCAT database. In this example we will use the “-z” option to create a stanza file that contains the information gathered by **rscan** as well as some default values that could be used for the node definitions.

To write the stanza format output of **rscan** to a file called “*mystanzafile*” run the following command.

```
rscan -z hmc01 > mystanzafile
```

This file can then be checked and modified as needed. For example you may need to add a different name for the node definition or add additional attributes and values.

Note: The stanza file will contain stanzas for things other than the LPARs. This information must also be defined in the xCAT database. It is not necessary to modify the non-LPAR stanzas in any way.

The updated stanza file might look something like the following.

```
Server-9117-MMA-SN10F6F3D:  
  objtype=node  
  nodetype=fsp  
  id=5  
  model=9118-575  
  serial=02013EB  
  hcp=hmc01  
  pprofile=  
  parent=Server-9458-10099201WM_A  
  groups=fsp,all  
  mgt=hmc  
  
node01:  
  objtype=node  
  nodetype=lp,osi  
  id=9  
  hcp=hmc01  
  pprofile=lp9  
  parent=Server-9117-MMA-SN10F6F3D
```

```
groups=lpar,all
mgt=hmc
```

```
node02:
  objtype=node
  nodetype=lpar,osi
  id=7
  hcp=hmc01
  pprofile=lpar6
  parent=Server-9117-MMA-SN10F6F3D
  groups=lpar,all
  mgt=hmc
```

Note: The **rscan** command supports an option to automatically create node definitions in the xCAT database. To do this the LPAR name gathered by **rscan** is used as the node name and the command sets several default values. If you use the “-w” option make sure the LPAR name you defined will be the name you want used as your node name.

2.8 Define xCAT cluster nodes

The information gathered by the **rscan** command can be used to create xCAT node definitions.

Since we have put all the node information in a stanza file we can now pass the contents of the file to the **mkdef** command to add the definitions to the database.

```
cat mystanzafile | mkdef -z
```

You can use the xCAT **lsdef** command to check the definitions (ex. “**lsdef -l node01**”). After the node has been defined you can use the **chdef** command to make any additional updates to the definitions, if needed.

2.9 Add IP addresses and hostnames to /etc/hosts

Make sure all node hostnames are added to /etc/hosts. Refer to the section titled “Add cluster nodes to the /etc/hosts file” in the following document for details. (<http://xcat.svn.sourceforge.net/viewvc/xcat/xcat-core/trunk/xCAT-client/share/doc/xCAT2onAIX.pdf>)

2.10 Define xCAT groups (optional)

XCAT supports both *static* and *dynamic* node groups. See the section titled “xCAT node group support” in the “xCAT2 Top Doc” document for details on using xCAT groups. (<http://xcat.svn.sourceforge.net/viewvc/xcat/xcat-core/trunk/xCAT-client/share/doc/xCAT2top.pdf>)

2.11 Set up customization scripts (optional)

xCAT supports the running of customization scripts on the nodes when they are installed.

This support includes:

- The running of a set of default customization scripts that are required by xCAT.

You can see what scripts xCAT will run by default by looking at the “xcatdefaults” entry in the xCAT “postscripts” database table. (I.e. Run “tabdump postscripts”). You can change the default setting by using the xCAT **chtab** or **tabedit** command. The scripts are contained in the /install/postscripts directory on the xCAT management node.

- The optional running of customization scripts provided by xCAT.

There is a set of xCAT customization scripts provided in the /install/postscripts directory that can be used to perform optional tasks such as additional adapter configuration.

- The optional running of user-provided customization scripts.

To have your script run on the nodes:

1. Put a copy of your script in /install/postscripts on the xCAT management node. (Make sure it is executable.)
2. Set the “postscripts” attribute of the node definition to include the comma separated list of the scripts that you want to be executed on the nodes. The order of the scripts in the list determines the order in which they will be run. For example, if you want to have your two scripts called “foo” and “bar” run on node “node01” you could use the **chdef** command as follows.

```
chdef -t node -o node01 -p postscripts=foo,bar
```

(The “-p” means to add these to whatever is already set.)

Note: The customization scripts are run during the boot process (out of /etc/inittab).

2.11.1 Add NTP setup script

To have xCAT automatically set up ntp on the cluster nodes you must add the **setupntp** script to the list of postscripts that are run on the nodes.

To do this you can either modify the “postscripts” attribute for each node individually or you can just modify the definition of a group that all the nodes belong to.

For example, if all your nodes belong to the group “compute” then you could add **setupntp** to the group definition by running the following command.

```
chdef -p -t group -o compute postscripts=setupntp
```

2.11.2 Add secondary adapter configuration script

It is possible to have additional adapter interfaces automatically configured when the nodes are booted. XCAT provides sample configuration scripts for both Ethernet and IB adapters. These scripts can be used as-is or they can be modified to suit your particular environment. The Ethernet sample is `/install/postscript/configeth`. When you have the configuration script that you want you can add it to the “postscripts” attribute as mentioned above. Make sure your script is in the `/install/postscripts` directory and that it is executable.

If you wish to configure IB interfaces please refer to: “xCAT 2 InfiniBand Support”
<http://xcat.svn.sourceforge.net/viewvc/xcat/xcat-core/trunk/xCAT-client/share/doc/xCAT2IBsupport.pdf>

Note: Do not forget that the new adapter interface hostnames must be resolvable on the node. To do this you can use the NIM `resolve.conf` resource to automatically create a `resolv.conf` file on the nodes when they are installed.

2.11.3 Configure NIM to use nimsh and SSL.

The NIM service handler (**nimsh**), is provided as an optional feature of NIM to be used in cluster environments where the standard **rsh** protocols are not secure enough.

Although **nimsh** eliminates the need for **rsh**, in the default configuration it does not provide trusted authentication based on key encryption. To use cryptographic authentication with NIMSH, you can configure NIMSH to use OpenSSL in the NIM environment. When you install OpenSSL on a NIM client, SSL socket connections are established during NIMSH service authentication. Enabling OpenSSL provides SSL key generation and includes all cipher suites supported in SSL version 3.

In order to facilitate the setup of **nimsh**, xCAT provides a sample customization called “`confignimsh`” that can be used to configure **nimsh** on the cluster nodes.

This script will also configure **nimsh** to use SSL and will remove the `./rhosts` file from the node. If you do not wish to have the `./rhosts` file removed from the node you must remove those lines from the **confignimsh** script before using it.

This script should only be run on AIX standalone (diskfull) cluster compute nodes. It should NOT be run on the xCAT management node, service nodes or diskless nodes.

The basic processes is:

- Make sure the AIX `openssl` files get installed on the management node and all the other cluster nodes. (Which should be done in any case.)
- On the xCAT management node run the following command.

nimconfig -c

You must also run this command on any service nodes that are being used.

- Add “**confignimsh**” to the list of scripts you want run on the nodes

For example, if all your nodes belong to the group “compute” then you could add **confignimsh** to the group definition by running the following command.

```
chdef -p -t group -o compute postscripts=confignimsh
```

After the nodes boot up you can verify that **nimsh** was set up correctly by running a NIM command such as: “**nim -o lspp <nodename>**”.

To be sure that nimsh is actually using SSL you can run the command:
”**nimquery -a host=<nodename>**”.

Example:

```
> nimquery -a host=xcatn11  
host:xcatn11.cluster.com:addr:10.2.0.104:mask:255.255.0.0:gtwy:  
10.2.0.200:_pif:en0:_ssl:yes:_psh:no:_res:no:asyn:no:mac:  
163D0DDAE202:_sslver:OpenSSL 0.9.8k 25 Mar 2009:
```

The “_ssl:yes” indicates that **nimsh** is using SSL.

Note: You could also set up **nimsh** at any time using the xCAT **updatenode** command to run the **confignimsh** script on the nodes.

2.12 Create prescripts (optional)

Starting with xCAT 2.5, *prescript* support is provided to run user-provided scripts during the node initialization process. These scripts can be used to help set up specific environments on the servers that handle the cluster node deployment. The scripts will run on the install server for the nodes. (Either the management node or a service node.) A different set of scripts may be specified for each node if desired.

One or more user-provided prescripts may be specified to be run either at the beginning or the end of node initialization. The node initialization on AIX is done either by the **nimnodeset** command (for diskfull nodes) or the **mkdsklnode** command (for diskless nodes.)

You can specify a script to be run at the beginning of the **nimnodeset** or **mkdsklnode** command by setting the *prescripts-begin* node attribute.

You can specify a script to be run at the end of the commands using the *prescripts-end* node attribute.

The format of the entry is:

```
[action1]:s1,s2...[/action2:s3,s4,s5...]/...
```

where:

*action** is either “standalone” or “diskless”
s1,s2.. are the prescripts to run for this action

The attributes may be set using the **chdef** command.

For example, if you wish to run the *foo* and *bar* prescripts at the beginning of the **nimnodeset** command you would run a command similar to the following.

```
chdef -t node -o node01 prescripts-begin="standalone:foo,bar"
```

When you run the **nimnodeset** command it will start by checking each node definition and will run any scripts that are specified by the *prescripts-begin* attributes.

Similarly, the last thing the command will do is run any scripts that were specified by the *prescripts-end* attributes.

For more information about using the xCAT prescript support refer to the “xCAT2 Top Doc”, (<http://xcat.svn.sourceforge.net/viewvc/xcat/xcat-core/trunk/xCAT-client/share/doc/xCAT2top.pdf>)

2.13 Gather MAC information for the install adapters.

Use the xCAT **getmacs** command to gather adapter information from the nodes. This command will return the MAC information for each Ethernet adapter available on the target node. The command can be used to either display the results or write the information directly to the database. If there are multiple adapters the first one will be written to the database.

The command can also be used to do a ping test on the adapter interfaces to determine which ones could be used to perform the network boot. In this case the first adapter that can be successfully used to ping the server will be written to the database.

Before running **getmacs** you must first run the **makeconsvercerf** command. You need to run **makeconsvercerf** any time you add new nodes to the cluster.

```
makeconsvercerf
```

To retrieve the MAC address for all the nodes in the group “*aixnodes*” and write the first adapter MAC to the xCAT database you could issue the following command.

getmacs aixnodes

To display all adapter information but not write anything to the database.

getmacs -d aixnodes

To retrieve the MAC address and do a ping test to determine which adapter MAC to use for the node, or the lpar is just created and there is no active profile for that lpar, or the lpar is on a P5 system and there is no lhea/sea ethernet adapters, you could issue the following command. (The ping operation will reboot the lpar and may take a while to complete.)

```
getmacs -d aixnodes -S 10.14.0.2 -G 10.14.0.2 -C 10.14.0.4
```

The output would be similar to the following.

```
#Type Location Code MAC Address Full Path Name Ping Result Device Type  
ent U9125.F2A.024C362-V6-C2-T1 fe9dfb7c602 /vdevice/l-lan@30000002 successful  
virtual  
ent U9125.F2A.024C362-V6-C3-T1 fe9dfb7c603 /vdevice/l-lan@30000003 unsuccessful virtual
```

From this result you can see that “*fe9dfb7c602*” should be used for this nodes MAC address.

For more information on using the **getmacs** command see the man page.

2.14 Create NIM client & group definitions

You can use the xCAT **xcat2nim** command to automatically create NIM machine and group definitions based on the information contained in the xCAT database. By doing this you synchronize the NIM and xCAT names so that you can use the same target names when running either an xCAT or NIM command.

To create NIM machine definitions you could run the following command.

```
xcat2nim -t node aixnodes
```

To create a NIM group definition called “*aixnodes*” you could run the following command.

```
xcat2nim -t group -o aixnodes
```

To check the NIM definitions you could use the NIM **lsnim** command or the xCAT **xcat2nim** command. For example, the following command will display the NIM definitions of the nodes: *node01*, *node02*, and *node03* (from data stored in the NIM database).


```
xcat2nim -t node -l -o node01-node03
```

2.15 Initialize the AIX/NIM nodes

You can use the xCAT **nimnodeset** command to initialize the AIX standalone nodes. This command uses information from the xCAT *osimage* definition and default values to run the appropriate NIM commands.

For example, to set up all the nodes in the group “*aixnodes*” to install using the *osimage* named “*610image*” you could issue the following command.

```
nimnodeset -i 610image aixnodes
```

To verify that you have allocated all the NIM resources that you need you can run the “**lsnim -l**” command. For example, to check node “node01” you could run the following command.

```
lsnim -l node01
```

The **nimnodeset** command will also set the “*profile*” attribute in the xCAT node definitions to “*610image* “. Once this attribute is set you can run the **nimnodeset** command without the “-i” option.

2.16 DHCP configuration(Optional)

For AIX clusters, there is a bootp service daemon on the xCAT MN working with AIX node installations. If the xCAT administrator wants to use the DHCP service instead of bootp for xCAT node cluster node installations, they will need to disable the bootp service. They will need to enable the **dhcpcd** in **rc.tcpip** to start dhcp service during system bootup. The AIX NIM installation will enable bootp automatically, so the administrator may need to stop the bootp daemon, to properly enable dhcp server.

The followings are the steps used by the xCAT administrator to disable the bootp and enable **dhcpcd** daemon for NIM node installation. The xCAT administrator can toggle between bootp and **dhcpcd** if they want to use bootp as part of the AIX node installation.

You just need to be aware that dhcp server daemon for node installation will not be active whenever the bootp daemon is active

Disable the bootp service(Optional)

a) Stop bootp from rebooting by commenting bootps line in **/etc/inetd.conf** file:

```
#bootps dgram udp wait root /usr/sbin/bootpd bootpd /etc/bootptab
```

b) Stop and restart the inetd subsystem:

refresh -s inetd

c) Stop bootp daemon:

ps -ef | grep bootp

kill the bootp process

d) Start dhcpsd server from rebooting by uncomment dhcpsd lines in /etc/rc.tcpip

Start up the DHCP Server

start /usr/sbin/dhcpsd "\$src_running"

e) Stop and restart the tcpip group

stopsrc -g tcpip

startsrc -g tcpip

After stopped bootp daemon and start DHCP daemon, you need to write the IP and MAC mapping into DHCP configuration file and restart DHCP daemon.

To configure DHCP server run:

makedhcp node01

2.17 Open a remote console (optional)

You can open a remote console to monitor the boot progress using the xCAT **rcons** command. This command requires that you have **conserver** installed and configured.

If you wish to monitor a network installation you must run rcons before initiating a network boot.

To configure conserver run:

makeconservercf

To start a console:

rcons node01

Note: You must always run makeconservercf after you define new cluster nodes.

2.18 Initiate a network boot

Initiate a remote network boot request using the xCAT **rnetboot** command. For example, to initiate a network boot of all nodes in the group "aixnodes" you could issue the following command.

rnetboot aixnodes

Note: If you receive timeout errors from the **rnetboot** command, you may need to increase the default 60-second timeout to a larger value by setting *ppctimeout* in the site table:

```
chdef -t site -o clustersite ppctimeout=180
```

2.19 Verify the deployment

- You can use the AIX **lsnim** command to see the state of the NIM installation for a particular node, by running the following command on the NIM master:

```
lsnim -l <clientname>
```

- Retry and troubleshooting tips:
 - For p6 lpar, it may be helpful to bring up the HMC web interface in a browser and watch the lpar status and reference codes as the node boots.
 - Verify network connections
 - If the **rnetboot** returns “unsuccessful” for a node, verify that bootp/dhcp and tftp is configured and running properly.
 - For bootp, view /etc/bootptab to make sure an entry exists for the node.
For dhcp, view /etc/dhcpd.conf to make sure an entry exists for the node.
 - Verify that the information in /tftpboot/<node>.info is correct.
 - Stop and restart inetd:

```
stopsrc -s inetd
startsrc -s inetd
```
 - Stop and restart tftp:

```
stopsrc -s tftp
startsrc -s tftp
```
 -
 - Verify NFS is running properly and mounts can be performed with this NFS server:
 - View /etc/exports for correct mount information.
 - Run the showmount and exportfs commands.
 - Stop and restart the NFS and related daemons:

```
stopsrc -g nfs
startsrc -g nfs
```
 - Attempt to mount a filesystem from another system on the network.

3.0 Cleanup

The NIM definitions and resources that are created by xCAT commands are not automatically removed. It is therefore up to the system administrator to do some clean up of unused NIM definitions and resources from time to time. (The NIM *lpp_source* and *SPOT* resources are quite large.) There are xCAT commands that can be used to assist in this process.

3.1 Removing NIM machine definitions

Use the xCAT **xcat2nim** command to remove all NIM machine definitions that were created for the specified xCAT nodes. This command will not remove the xCAT node definitions.

For example, to remove the NIM machine definition corresponding to the xCAT node named “node01” you could run the command as follows.

```
xcat2nim -t node -r node01
```

The **xcat2nim** command is intended to make it easier to clean up NIM machine definitions that were created by xCAT. You can also use the AIX **nim** command directly. See the AIX/NIM documentation for details.

3.2 Removing NIM resources

Use the xCAT **rmnimimage** command to remove all the NIM resources associated with a given xCAT *osimage* definition. The command will only remove a NIM resource if it is not allocated to a node. You should always clean up the NIM node definitions before attempting to remove the NIM resources. The command will also remove the xCAT *osimage* definition that is specified on the command line.

For example, to remove the “610image” *osimage* definition along with all the associated NIM resources run the following command.

```
rmnimimage 610image
```

If necessary, you can also remove the NIM definitions directly by using NIM commands. See the AIX/NIM documentation for details.